

Description

The B100 provides an additional voltage in a FlexPower system. This voltage can either be accessed directly via the B100's terminals or through other FlexPower Accessory Boards. The B100's input is typically supplied by the B1 buss in the system, allowing the FPO's battery set to back up the B100's output voltage without the need for a second battery set. Output settings for the B100 include a fixed 12V setting and an adjustable setting of 5 to 18V. Multiple B100s can be added to a system for virtually unlimited voltage combinations.

Specifications

Input	Voltage	8-25V (Must be at least 3V above output voltage setting)
	Current	3.5A maximum
	Standby Current	35mA
Output	Voltage	5-18V
	Current	4A maximum (Class 2 Power Limited)
	Fuse	7.5A ATM automotive style
Size		4.00" x 2.50" x 1.75" (102mm x 64mm x 45 mm)
Weight		0.20lb (0.09kg)

Regulatory Information


The equipment discussed within this manual has been tested to the following standards:

- UL294, UL603, UL864, UL1076, UL1481, UL2044, UL2572
- ULC S318, ULC S319, ULC S527
- CSA C22.2 #107.1
- CSFM Approved

Mounting the B100 Secondary Power Supply

Mounting of the B100 Board to an enclosure is via the four snap-in standoffs supplied.


1. Locate the appropriate mounting holes in the enclosure and snap the standoffs into the holes.
2. Align the board mounting holes with the standoffs (be sure the PC board is properly oriented) and snap the board onto the standoffs.

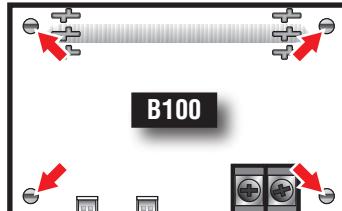


Connecting the B100 Secondary Power Supply

⚠ Remove all AC and battery power from the FPO system before adding or replacing a B100 board.

⚠ Observe polarity of the DCIN and BR Connections or damage to the system could occur.

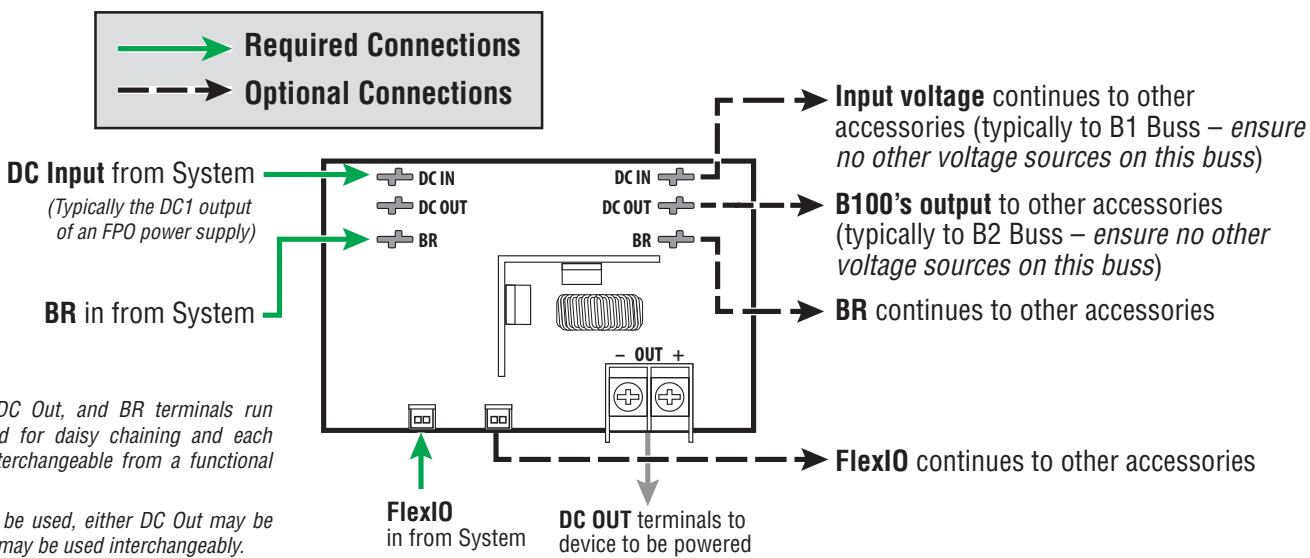

B100 – Secondary Power Supply

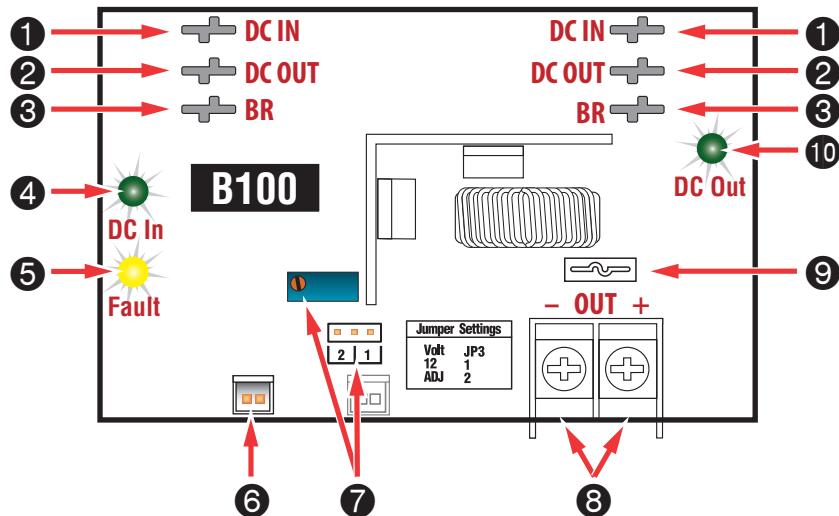

1 DC IN Connectors (J1 & J4)

These fastons are the input to the B100. Either faston may be used as the input. Two connections are provided to allow this voltage to pass through to other accessory boards in the system. This input voltage must always be at least 3 volts above the output voltage setting for the B100 to maintain its output.

2 DC OUT Connectors (J2 & J5)

These fastons are the output of the B100 for connection to other accessories in the system. This output may be considered as an equivalent to the DC1 faston of an FPO power supply.

Either or both DC OUT fastons may be used in the system.

⚠️ Ensure there are no other voltage sources connected to the buss before powering the system or damage WILL occur.

3 BR Connectors (J3 & J6)

The DC Common buss in the system. All boards in the system must have their BR fastons wired together for proper operation (except for between the DC and AC sections of an FPX hybrid system).

4 DC IN LED (D1) – Green

This LED indicates the availability of voltage on the DC IN Buss. When voltage is available on the buss, the LED is lit.

5 FAULT LED (D4) – Yellow

This LED lights when the B100 detects a fault condition. This fault condition also transmits to the FPO power supply.

Fault conditions detected include ruptured output fuse, no output, output overload, or output voltage out of regulation.

6 FlexIO Connectors (JP1 & JP2)

These connectors allow the fault status of the B100 to be transmitted to the FPO power supply and pass the FlexIO buss on to other accessory boards in the system.

7 Output Voltage Selection (JP3 & VR1)

This jumper selects the output voltage for the B100 and the potentiometer sets the output voltage when in the adjustable range. In adjustable range, voltage may be set from 5 to 18VDC.

Possible jumper settings are as follows:

- **12V Out** JP3 Position 1
- **Adjustable Output** JP3 Position 2

⚠️ The VR1 potentiometer will have no effect unless the jumper is set for the adjustable range.

8 DC Output

This is the output terminal strip. This terminal strip is non-removable and accepts wire sizes from AWG12 – AWG22. The terminals are labeled on the PC board by the terminal strip.

⚠️ CAUTION When powering magnetic loads such as maglocks, door strikes, solenoids, etc, each of these loads must have a reverse protection diode either built-in or external to the device.

9 Output Fuse (F1)

This fuse protects the DC Output terminals. It does not protect the DC OUT faston.

10 DC OUT LED (D7) – Green

This LED indicates the availability of voltage on the DC OUT Buss. When voltage is available on the buss, the LED is lit.

B100 Current Loading

Power drawn from the B100 subtracts from the power available from the FPO supplying the B100. The most accurate way to determine the draw from the FPO is to calculate the actual power draw and factor in the efficiency of the B100.

$$P_I = P_O * 1.15$$

Where:

P_I = Input power of the B100

P_O = Output power draw on the B100

B100 Current Load Examples

Example: 1

An FPO250 set for 24V is powering a B100. The B100 is set for an output of 12V and has a 3A total load connected.

$$P_O = 12V * 3A = 36W$$

$$P_I = 36W * 1.15 = 41.4W$$

In this example, the B100 will draw 41.4W from the FPO250

This leaves 208.6W available from the FPO250

Example: 3

What size FPO do I need to create a dual voltage power supply providing 12V@1A and 24V@3A?

$$12V * 1A * 1.15 = 13.8 \text{ Watts}$$

$$24V * 3A = 72 \text{ Watts}$$

$$13.8W + 72W = 85.8W$$

The next greater FPO to 84 is 150

Use an FPO150 power supply with the B100 converter

Example: 2

What size FPO do I need to create a dual voltage power supply providing 12V@4A and 24V@6A?

$$12V * 4A * 1.15 = 55.2 \text{ Watts}$$

$$24V * 6A = 144 \text{ Watts}$$


$$144W + 55.2W = 199.2W$$

The next greater FPO to 199.2 is 250


Use an FPO250 power supply with the B100 converter

B100 Application Examples

Dual Voltage (24V/12V) using one FPO, one B100

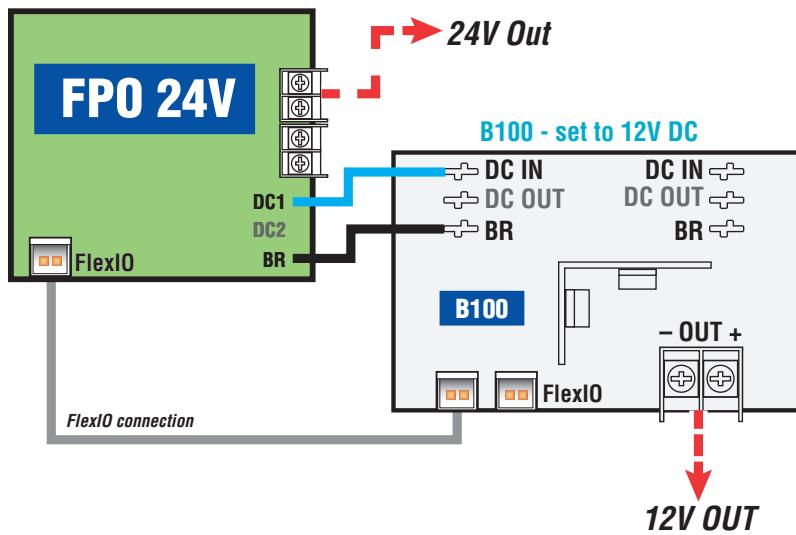


Dual Voltage (24V/12V) using one FPO, one B100 with 8 output distribution

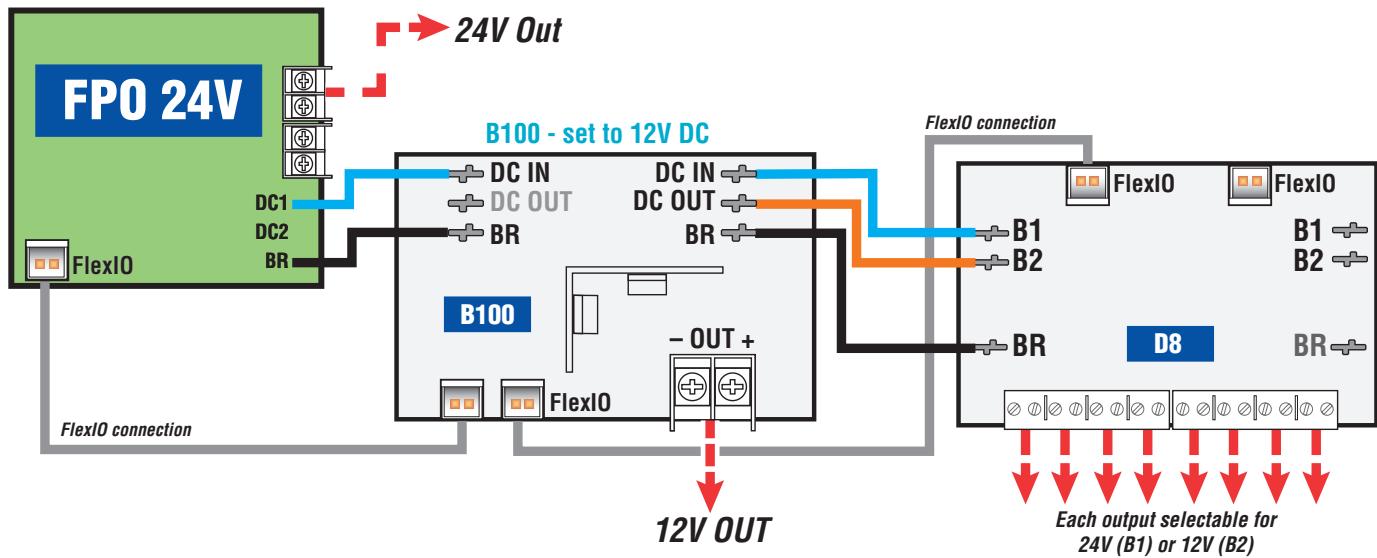



B100 Application Examples

Triple Voltage (24V/12V/5V) using one FPO, two B100's

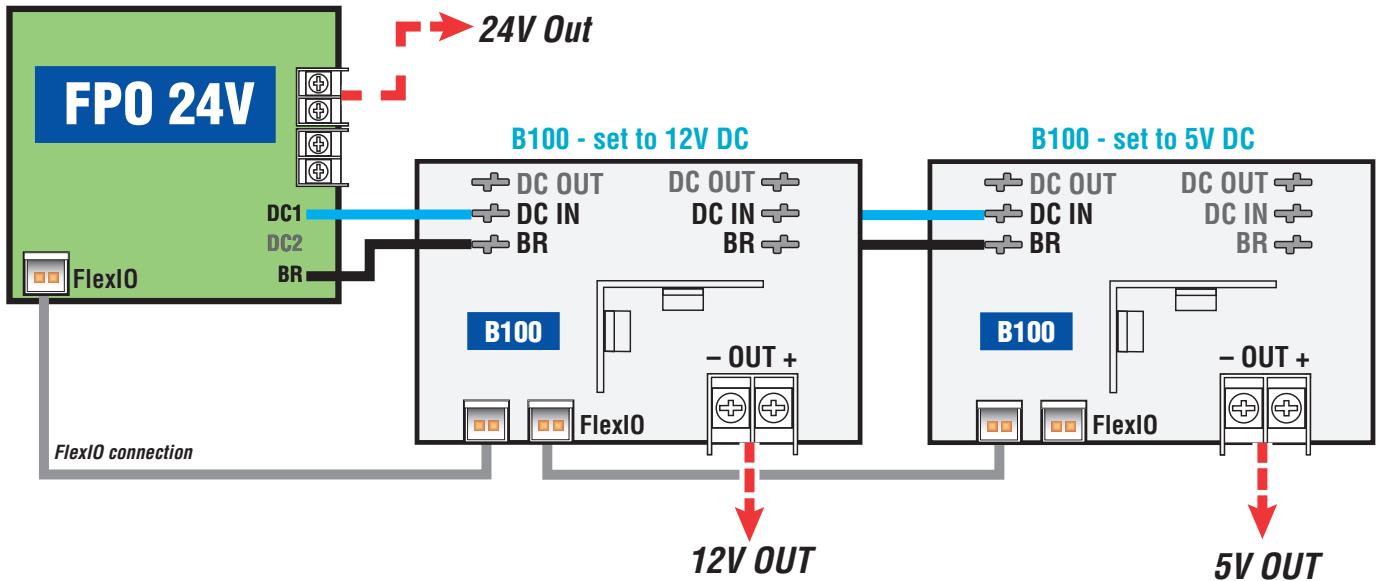

Triple Voltage (24V/12V/5V) using one FPO, two B100's with 16 output distribution

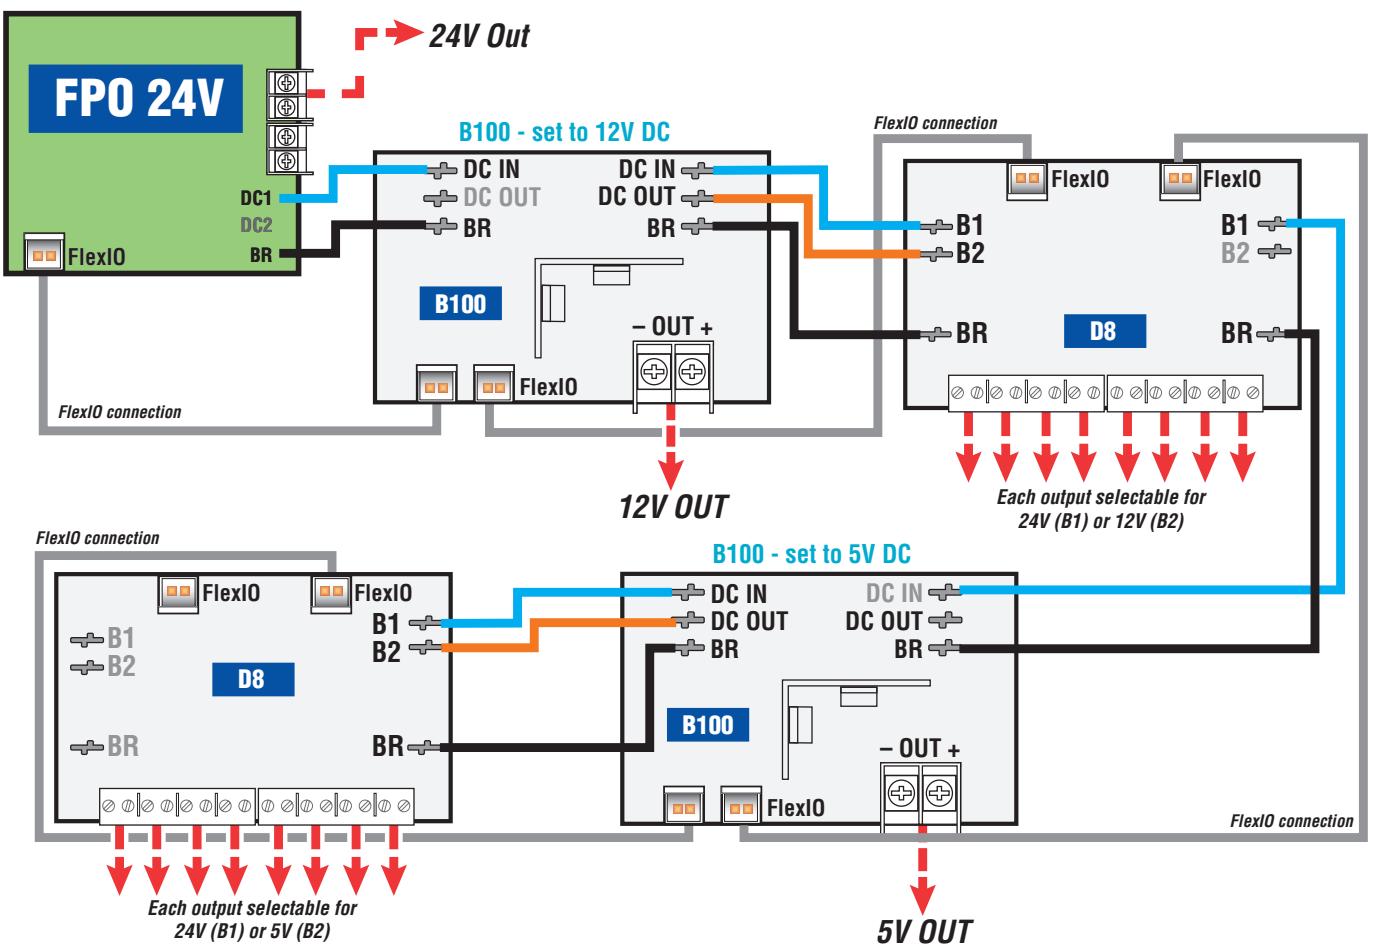

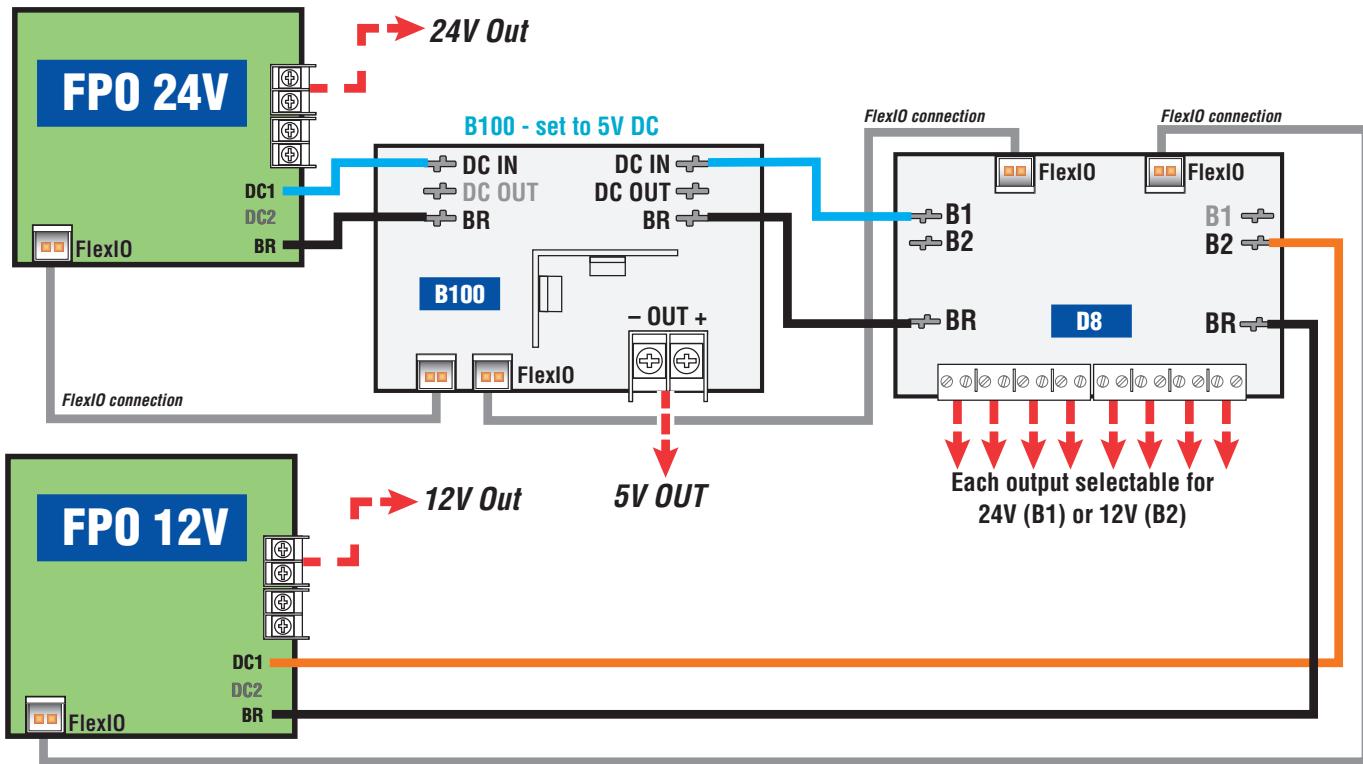B100 Application Examples**Triple Voltage (24V/12V/5V) using two FPO's, one B100 with 8 output distribution**

FlexPower System Replacement Parts

Board Kits	Order #	Description
FP0250	A01-007	FP0250 replacement board
FP0150	A01-005	FP0150 replacement board
FP075	A01-003	FP075 replacement board
B100	A03-009	DC-DC Converter (12VDC or adjustable 5 to 18VDC) replacement board
D8	A02-001	Simple distribution replacement board
D8P	A02-002	Simple distribution (Class 2) replacement board
F8	A02-003	FAI controlled distribution replacement board
F8P	A02-004	FAI controlled distribution (Class 2) replacement board
C4	A02-005	Four zone power control replacement board
C4P	A02-006	Four zone power control (Class 2) replacement board
C8	A02-007	Eight zone power control replacement board
C8P	A02-008	Eight zone power control (Class 2) replacement board
M8	A02-011	Eight zone managed power control replacement board
M8P	A02-012	Eight zone managed power control (Class 2) replacement board
N24	A04-001	Two Input, 4 Output NAC Expander accessory replacement board
NL2	A11-007	Two Port NetLink network communication board (used in FPO systems)
NL4	A11-004	Four Port NetLink network communication board (used in FPO systems)
NLR	A11-002	NetLink network communication kit / remote reset (used in FPA systems)
NS2	A11-003	Reset module board for use with NL2
RB2	A25-001	2A Relay, 12VDC or 24VDC input range, DP/DT
RB5	A25-002	5A Relay, 12VDC or 24VDC input range, DP/DT
RB8	A25-003	8A Relay, 12VDC or 24VDC input range, DP/DT

Hardware	Order #	Description
DL1	A05-001	DataLink USB cable
BDM	A05-006	Battery Disconnect Module cable
AC Cable	A05-005	AC Input Cable for FPO Power Supply
Battery Cable	A05-002	Battery Harness – 24"
Module Cable - 12"	A05-003	Accessory board cable set – 12"
Module Cable - 18"	A05-004	Accessory board cable set – 18"
Fuse - 3A	A05-201	ATM-3A Fuse – Bag of 25
Fuse - 5A	A05-202	ATM-5A Fuse – Bag of 25
Fuse - 7.5A	A05-203	ATM-7.5A Fuse – Bag of 25
Fuse - 10A	A05-204	ATM-10A Fuse – Bag of 25
Fuse - 15A	A05-205	ATM-15A Fuse – Bag of 25
Fuse - 30A	A05-206	ATM-30A Fuse – Bag of 25
Standoffs	A05-301	Nylon Standoffs – Bag of 25
Camlock Set	A05-302	Key and Lock fits LSP "E" enclosure

LifeSafety Power, FlexConnect and FlexIO are trademarks of LifeSafety Power Inc. or its affiliates.

LifeSafety Power Inc.
750 Tower Road, Unit B
Mundelein, IL 60060 USA
www.lifesafetypower.com
Tel (888) 577-2898
info@lifesafetypower.com

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. LifeSafety Power makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. LifeSafety Power's only obligations are those in the LifeSafety Power Standard Terms and Conditions of Sale for this product, and in no case will LifeSafety Power or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, LifeSafety Power reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.